

The 5a program for HIT HDD

Some one may have this situation: when load from HDD or do some operation with modules, the status would show “5a”, and the program may hang. As the follow picture:



The reason is some of the modules or the PCB has problem, it may cause the program stop and hang.

How to solve it:

Load the HDD from file and choose the button “by single sector” that the program will read the modules one by one. It could avoid the 5a problem furthest:



Then we can check the problem in modules, as the follow, we can see the RSVD module was broken, so find another good backup file or turn to the SA-C backup this module and upload it. The driver would be ok.

